

IP CEILING LOUDSPEAKER

RCS8-IPM

The RCS8-IPM is a 20 Watts IP ceiling loudspeaker for voice, paging, intercom, music streaming, audio routing, pre-recorded and scheduled announcement, VoIP communication or as the SIP endpoint where network-wide communication is desired and high-output loudspeakers are required to overcome high ambient noise and/or large spaces. The RCS8-IPM incorporates 3 control inputs for level control and source selection (using the RAC 5/8 controllers), 1 contact output for triggering events. The IP speaker also comes with a built-in microphone input, allowing hands-free intercom. The YMC0101-005 microphone capsule could be connected to this microphone interface. To configure, control, monitor the IP speakers in real-time, this can be easily done through your favorite web browser interface, making the management even the most complex environments simpler than ever.



● Features

Support PoE+, PoE and/or connect to 24 VDC power adapter (if PoE+ is not available)

Standard RJ45 interface, PCB control and Class-D amplifier board (2 x 20W)

Cost effective and simple installation with single cable deployment

Easily configured, controlled, managed and monitored via web browser

IP based for music streaming, routing, paging and control over LAN/WAN

Full DSP includes AEC, NR, Ducker, AGC, PEQ, Hi/Low Pass, Compressor, Limiter, etc.

3 control inputs for level control and source selection using the RAC 5/8 controller

1 relay contact output

Internal storage (200 MB)

Integrated scheduler for triggering of messages, music and alerts

Network audio codecs: G.711, G.722, WAV, MP3

3rd party control with TERRACOM system

Support VoIP call via SIP protocol

● Certifications

EN 55032, EN 55035,
EN 61000-3-2, EN 61000-3-3

● Electrical

Rated power, Watts (24 VDC, 1.8 A external power supply)	10
Rated power, Watts (PoE+, IEEE802.3 af, class 3)	20
Driver Impedance, Ohms	8
Effective Frequency Range, Hz (BSEN60268-5)	65 - 17,000
S.P.L. @ 1 m, 1 Watt, dB, Octave, 100 Hz-10 kHz	94
S.P.L. @ 1 m, Full power, dB, Octave, 100 Hz-10 kHz	104
Dispersion at 1k/2k Hz, Degrees	180/110



TECHNICAL SPECIFICATIONS

RCS8-IPM



Power supply	PoE+, IEEE802.3af, class 3 DC power input: 24 VDC (18-24 VDC) Minimum power supply: 2 A
● Control Inputs	
Type	Euro-block terminal
Mode (analog/TTL), VDC	max. 3.3
TTL logic input (max.), VDC	HIGH active: 3.3 LOW active: 1.2
● Interconnection	
Female RJ45 socket, CAT5/6 cables	
Max. cable length, m	100
● Supported Protocols	
SIP 2.0 (peer and proxy)	
IETF SIP (RFC3261)	
IETF IGMP version 2 (RFC2236)	
IETF RTP (RFC1889)	
● Contact Output	
Type	Euro-block terminal
Default status	OPEN (N.O.)
Maximum voltage, VDC	100
Maximum current, A	0.5 A
● Audio	
Audio compression	G.711, G.722, WAV, MP3
● Network	
10/100 Mbps Base TX Ethernet RJ45	
Manual or Dynamic Host Configuration Protocol (DHCP) IP address setup	
Time and date synchronization using NTP	
● Environmental	
IP-rating	21
Min/Max amb temp	-10°C to 55°C
Relative humidity	n/a
● Mechanical	
Dimensions, diameter, mm	Ø280x 110
Net weight, kg	1.9
Colour (Unless Specified)	White RAL9016




INSTALLATION GUIDE

RCS8-IPM


Side view
(unit: mm)

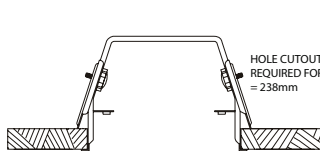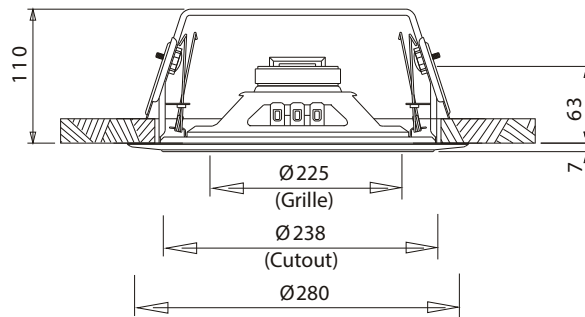


1) Place the mounting bracket inside the ceiling aperture and secure it with the two black knobs.

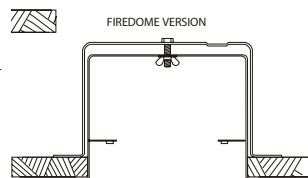


2) Loosen the retaining sliders and push to the top of the bracket. Once the bracket is through the hole pull down the sliders and tighten the retaining nut clamping the ceiling.

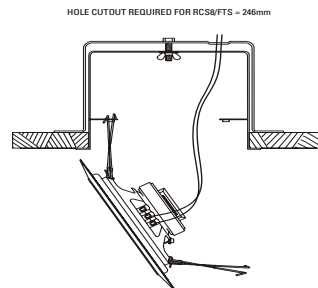


3) FITTING THE SPEAKER
Compress "V" spring and fit into the retaining ear within the bracket. Connect cable to terminal block and select wattage required.

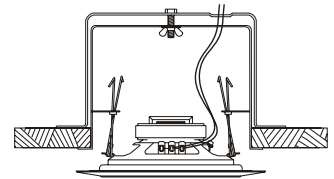

4) Fit second "V" clip into second retaining ears and gently push the speaker up into the bracket (do not push the central perforated grille area) the speaker will self locate into the bracket.

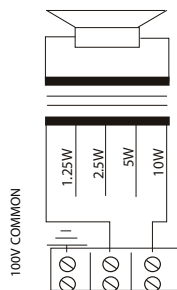

Circuit Diagram

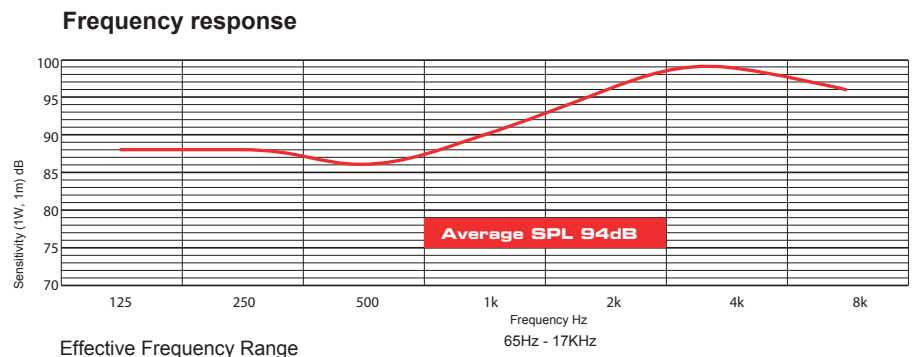

Disclaimer: We reserve the right of changes and errors.




ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global



INSTALLATION GUIDE

RCS8-IPM

LOUDSPEAKER CONNECTIONS

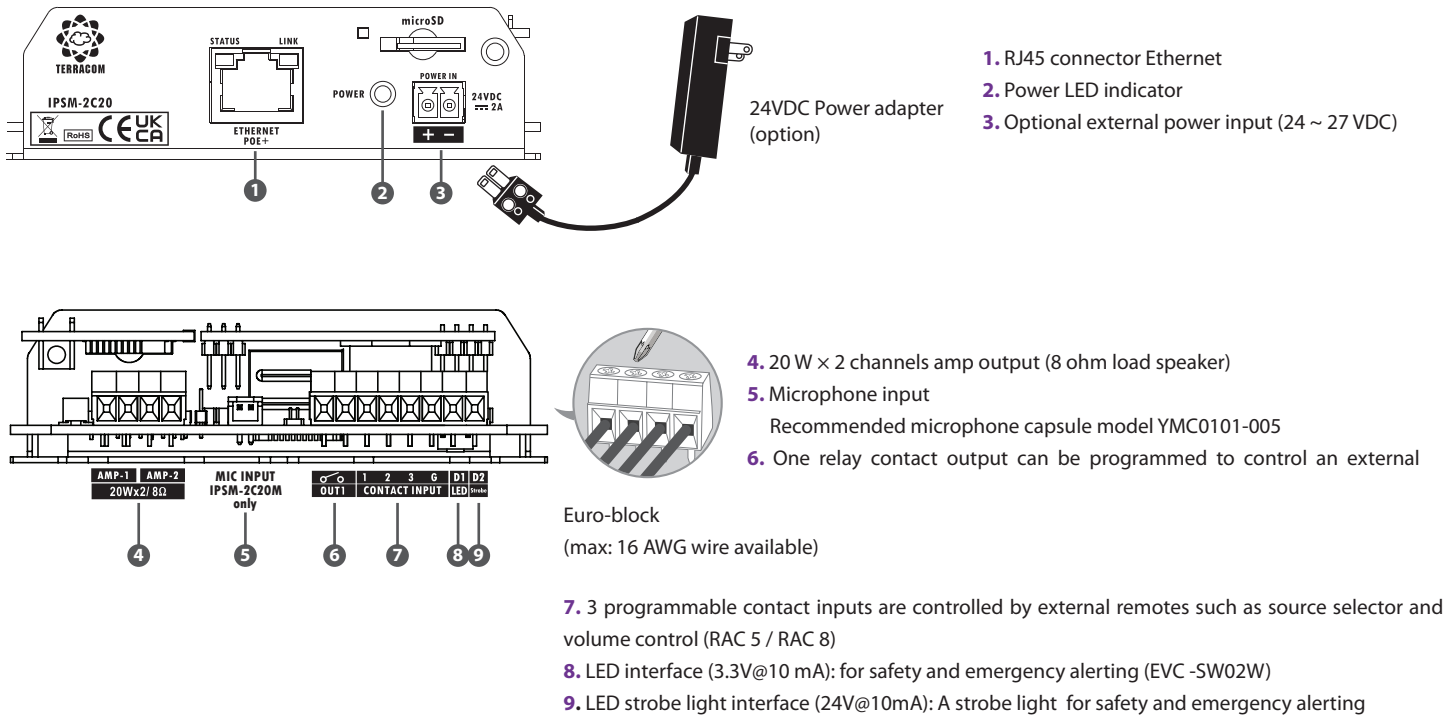

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global





QUICK START RCS8-IPM

Network

RCS8-IPM is shipped set to the default IP Address of 192.168.100.1:

1. Specify the IPv4 of the computer manually and in the same range of the RCS8-IPM (192.168.100.xxx).
2. Open a web-browser on the computer (Chrome or Firefox recommended) and navigate to the speaker's address. (192.168.100.1).
3. Default **User name / Password: admin / admin.**

4. Click **SETUP > BASIC SETTINGS**: define a manual IP address or enable DHCP.

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global




QUICK START

RCS8-IPM

DSP

Adjust different audio features by navigating to the **DSP Tab**.

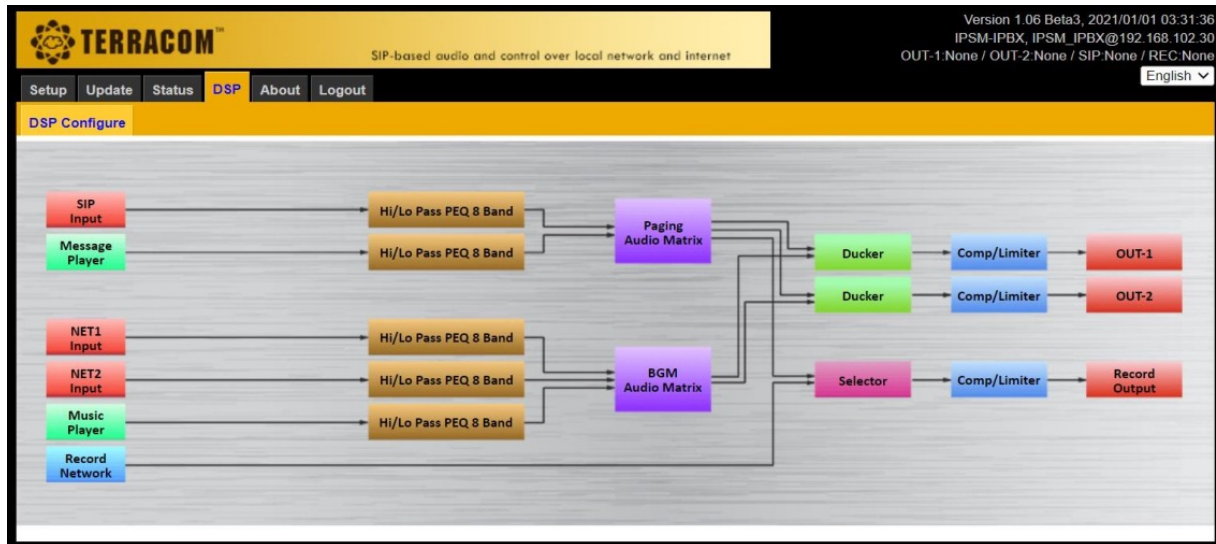

You will be able to adjust output volume by clicking on "OUT1".

This will open a popup window, allowing you to change the volume and showing the current output level on a VU meter.

Disclaimer: We reserve the right of changes and errors.




ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global



ONVIF RCS8-IPM

Milestone VMS

1. Within the **ONVIF** section of the configuration page change the **User Authorize** to **Enable**.

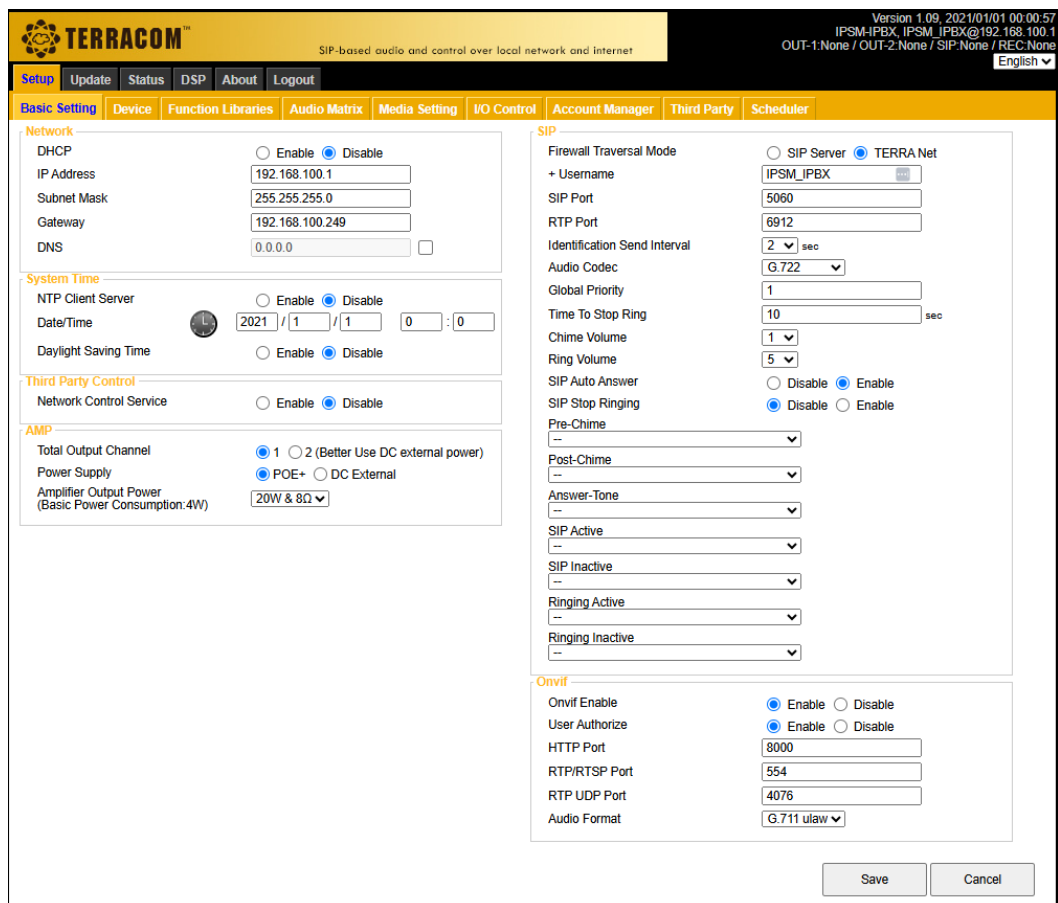

The screenshot shows the TERRACOM configuration interface. The top navigation bar includes tabs for Setup, Update, Status, DSP, About, and Logout. Below this is a secondary navigation bar with tabs for Basic Setting, Device, Function Libraries, Audio Matrix, Media Setting, I/O Control, Account Manager, Third Party, and Scheduler. The main content area is divided into several sections:

- Network:** DHCP (Enable/Disable), IP Address (192.168.100.1), Subnet Mask (255.255.255.0), Gateway (192.168.100.249), DNS (0.0.0.0).
- System Time:** NTP Client Server (Enable/Disable), Date/Time (2021 / 1 / 1 0 : 0), Daylight Saving Time (Enable/Disable).
- Third Party Control:** Network Control Service (Enable/Disable).
- AMP:** Total Output Channel (1 or 2), Power Supply (POE+ or DC External), Amplifier Output Power (20W & 8Ω).
- SIP:** Firewall Traversal Mode (SIP Server or TERRA Net), Username (IPSM_IPBX), SIP Port (5060), RTP Port (6912), Identification Send Interval (2 sec), Audio Codec (G.722), Global Priority (1), Time To Stop Ring (10 sec), Chime Volume (1), Ring Volume (5), SIP Auto Answer (Disable/Enable), SIP Stop Ringing (Disable/Enable), Pre-Chime, Post-Chime, Answer-Tone, SIP Active, SIP Inactive, Ringing Active, Ringing Inactive.
- Onvif:** Onvif Enable (Enable/Disable), User Authorize (Enable/Disable), HTTP Port (8000), RTP/RTSP Port (554), RTP UDP Port (4076), Audio Format (G.711 ulaw).

At the bottom right of the configuration area are buttons for Save and Cancel.

Disclaimer: We reserve the right of changes and errors.




ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global




ONVIF RCS8-IPM



2. Within **Milestone VMS** in the **Recording Server** screen, right click and click **add hardware**, and then choose the option. Click next.

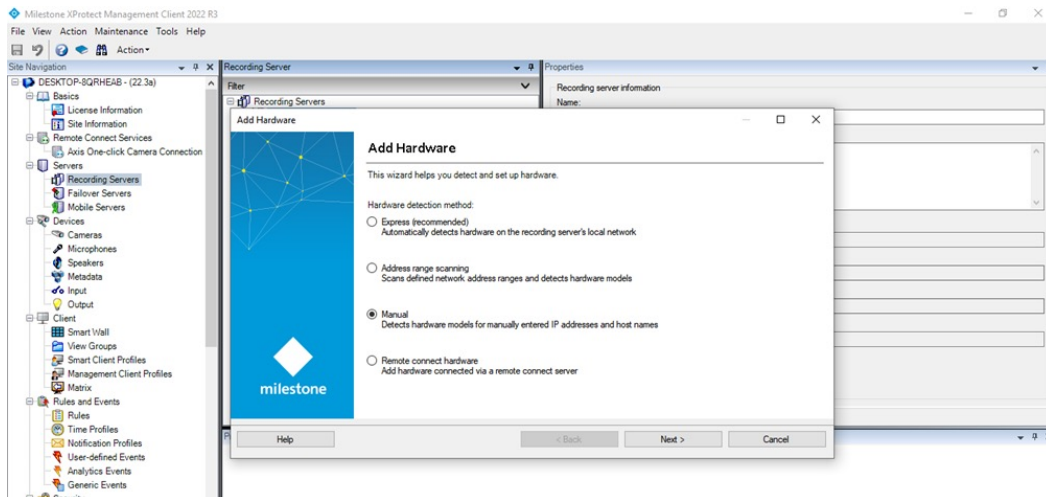

3. Add the **username** and **password** of the Penton IP speaker product to the user credentials list and **untick** the default credentials entry. Click next.

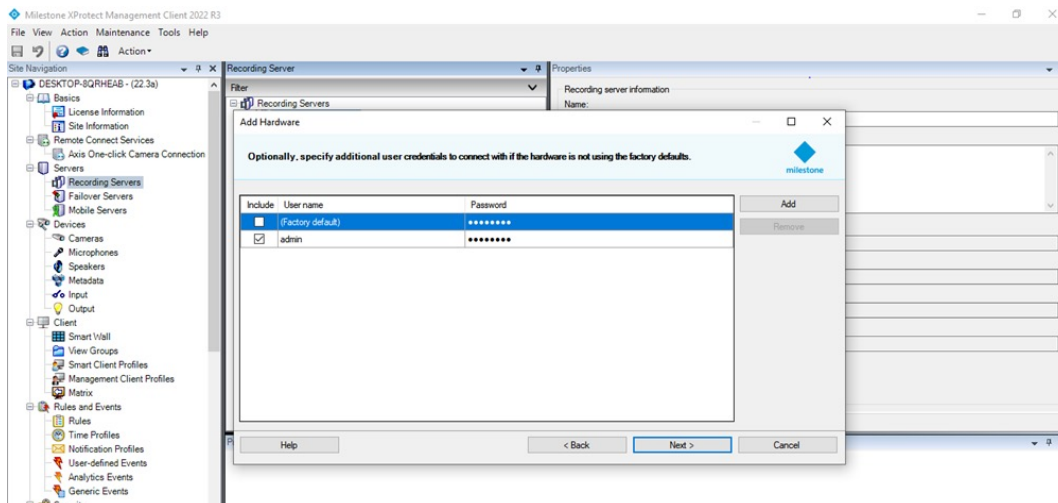

Disclaimer: We reserve the right of changes and errors.




ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global




ONVIF RCS8-IPM

4. Leave all the manufacturers **ticked**. Click next.

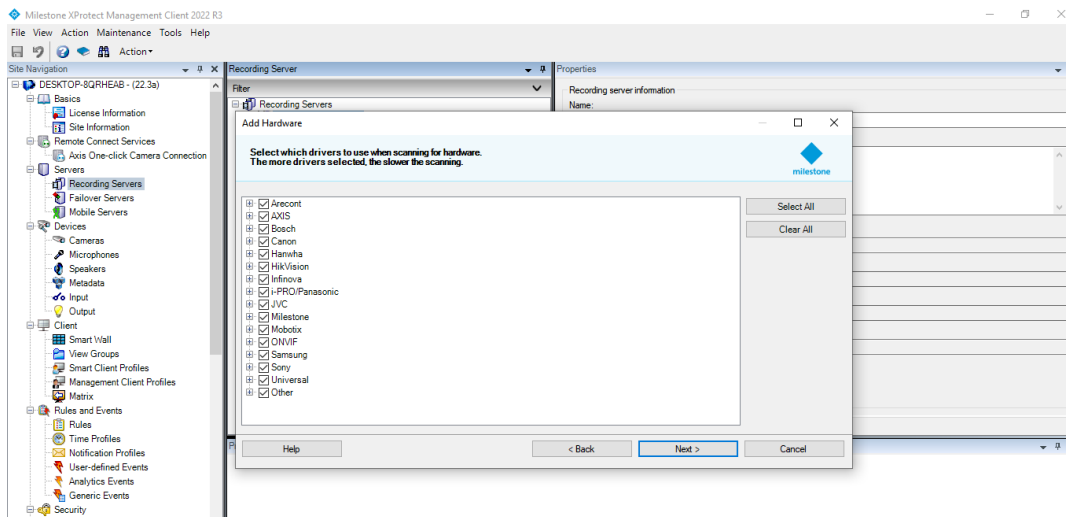

5. Enter the **IP address** of the Penton IP speaker and add the port as **8000**. Click next.

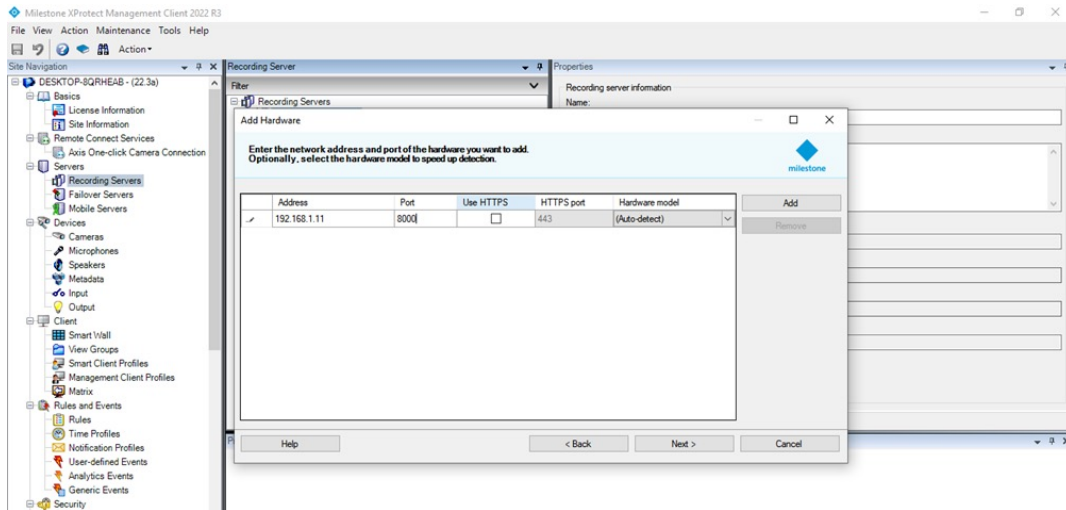

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global




ONVIF RCS8-IPM

7. Select the hardware elements that you would like to implement.


Camera: will show a holding screen to show connection.

Microphone: will allow the IP speaker device to stream back to the VMS. (For example, triggering messages etc.)

Loudspeaker: will allow the VMS to communicate with the IP speaker via any connected microphone.

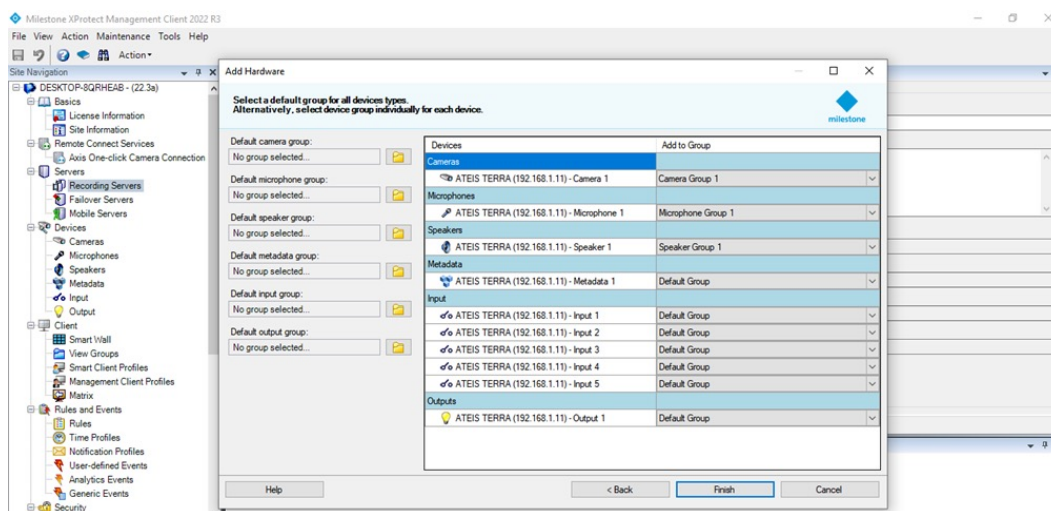

8. Add devices to the desired groups.

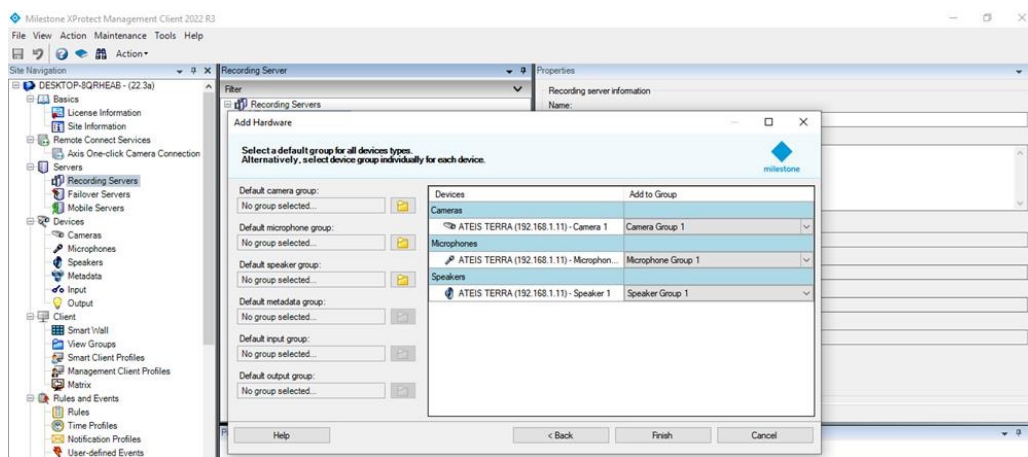

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.

Celsiusstraat 1, 2652 XN Lansingerland, Netherlands


Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global






ONVIF RCS8-IPM

9. All resources will now be available in the Milestone VMS.

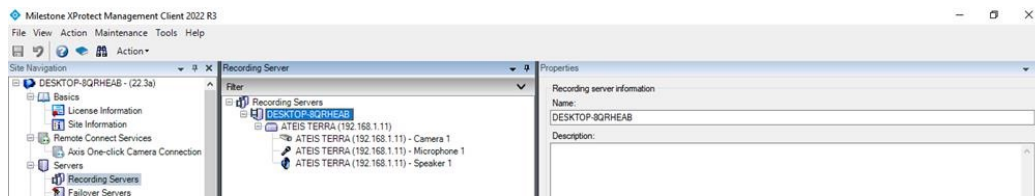

Dahua DSS

1. Within the **ONVIF** section of the configuration page change the **User Authorize** to **Enable**.

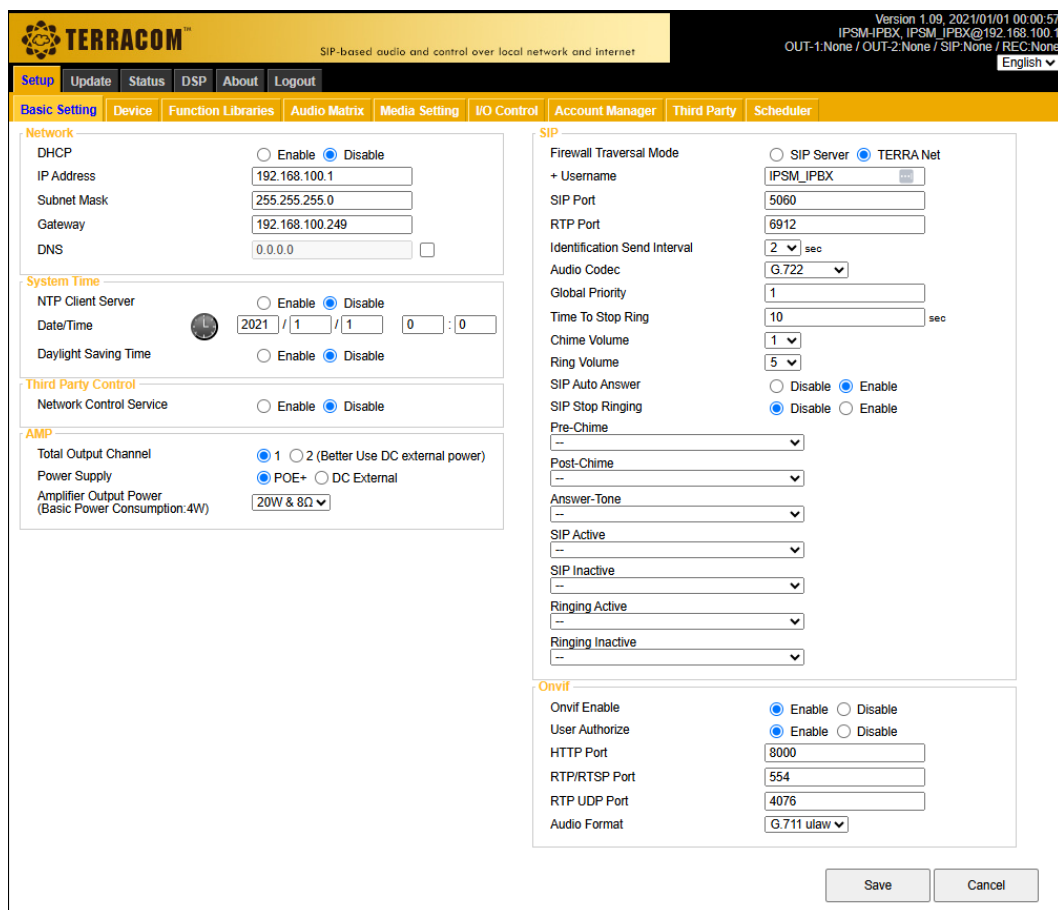

Disclaimer: We reserve the right of changes and errors.




ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global



ONVIF RCS8-IPM


2. Within the **DSS** software go to the **Device Menu** screen and **click add**.

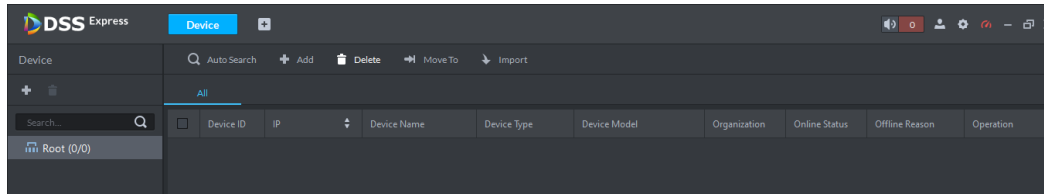


3. Enter the following information:

- 1) Enter the desired device name
- 2) Register Mode is **ONVIF**
- 3) Category is **Encoder**
- 4) Enter the IP address of the speaker/module
- 5) Port is **8000**
- 6) Enter Username/Password of the IP loudspeaker/module

Then click **Add**.

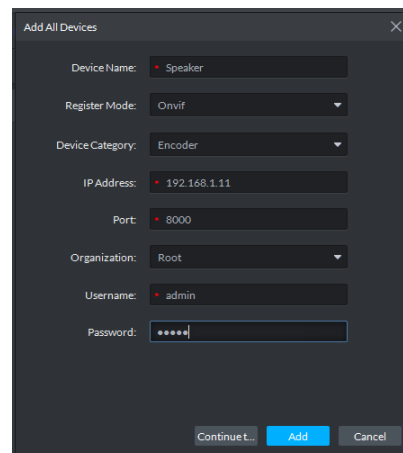


4. Wait for the device to show online.

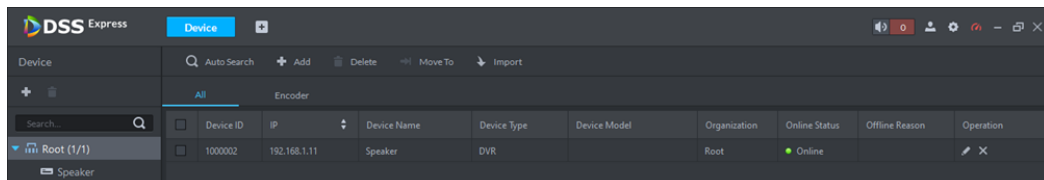

5. Return to the **Live View** screen for the device you have just added and click the small microphone **icon**.

Ensure all the microphone settings are correct within the DSS in relation to your input microphone.

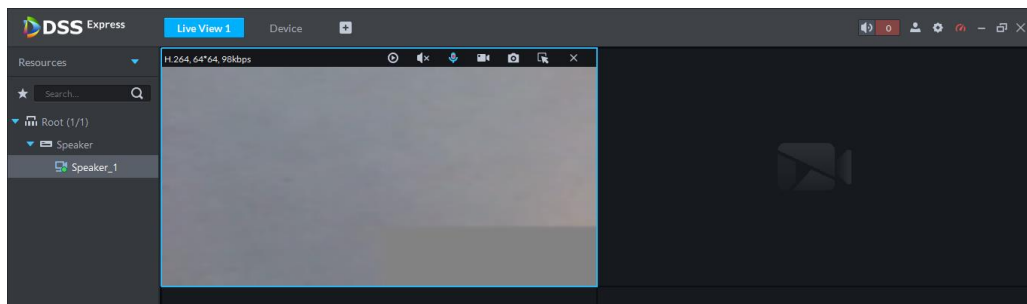

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global





SET UP TERRACOM II RCS8-IPM

Go further with **TERRACOM II**

Please download the TERRACOM II User Manual by clicking the link below:

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.

Celsiusstraat 1, 2652 XN Lansingerland, Netherlands

Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global

