



WEATHERPROOF IP HORN LOUDSPEAKER

APH30-IP

The APH30-IP is a 20 Watts IP horn loudspeaker for voice, paging, intercom, music streaming, audio routing, pre-recorded and scheduled announcement, VoIP communication or as the SIP endpoint where network-wide communication is desired and high-output loudspeakers are required to overcome high ambient noise and/or large spaces.

The APH30-IP incorporates 3 control inputs for level control and source selection (using the RAC 5/8 controllers), 1 contact output for triggering events.

To configure, control, monitor the IP speakers in real-time, this can be easily done through your favorite web browser interface, making the management even the most complex environments simpler than ever.



● Features

Support PoE+, PoE and/or connect to 24 VDC power adapter (if PoE+ is not available)

Standard RJ45 interface, PCB control and Class-D amplifier board (2 x 20W)

Cost effective and simple installation with single cable deployment

Easily configured, controlled, managed and monitored via web browser

IP based for music streaming, routing, paging and control over LAN/WAN

Full DSP includes AEC, NR, Ducker, AGC, PEQ, Hi/Low Pass, Compressor, Limiter, etc.

3 control inputs for level control and source selection using the RAC 5/8 controller

1 relay contact output

Internal storage (200 MB)

Integrated scheduler for triggering of messages, music and alerts

Network audio codecs: G.711, G.722, WAV, MP3

3rd party control with TERRACOM system

Support VoIP call via SIP protocol

● Certifications

EN 55032, EN 55035,
EN 61000-3-2, EN 61000-3-3

● Electrical

Rated power, Watts (24 VDC, 1.8 A external power supply)	30
Rated power, Watts (PoE+, IEEE802.3 af, class 3)	20
Driver Impedance, Ohms	8
Effective Frequency Range, Hz (BSEN60268-5)	340-16,000
S.P.L. @ 1 m, 1 Watt, dB, Octave, 100 Hz-10 kHz	106
S.P.L. @ 1 m, Full power, dB, Octave, 100 Hz-10 kHz	120
Dispersion at 1k/2k Hz, Degrees	105/49 Horizontal 142/68 Vertical



ATEIS Europe B.V.

Celsiusstraat 1, 2652 XN Lansingerland, Netherlands

Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global



TECHNICAL SPECIFICATIONS



APH30-IP

Power supply	PoE+, IEEE802.3af, class 3 DC power input: 24 VDC (18-24 VDC) Minimum power supply: 2 A
● Control Inputs	
Type	Euro-block terminal
Mode (analog/TTL), VDC	max. 3.3
TTL logic input (max.), VDC	HIGH active: 3.3 LOW active: 1.2
● Interconnection	
Female RJ45 socket, CAT5/6 cables	
Max. cable length, m	100
● Supported Protocols	
SIP 2.0 (peer and proxy)	
IETF SIP (RFC3261)	
IETF IGMP version 2 (RFC2236)	
IETF RTP (RFC1889)	
● Contact Output	
Type	Euro-block terminal
Default status	OPEN (N.O.)
Maximum voltage, VDC	100
Maximum current, A	0.5 A
● Audio	
Audio compression	G.711, G.722, WAV, MP3
● Network	
10/100 Mbps Base TX Ethernet RJ45	
Manual or Dynamic Host Configuration Protocol (DHCP) IP address setup	
Time and date synchronization using NTP	
● Environmental	
IP-rating	66
Min/Max amb temp	-5°C to 55°C
Relative humidity	≤95%
● Mechanical	
Dimensions, WxHxD mm	258 x 180 x 280
Net weight, kg	2.53
Colour (Unless Specified)	Grey, RAL7035




INSTALLATION GUIDE

APH30-IP

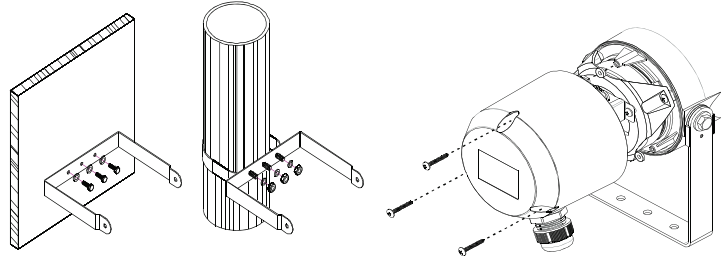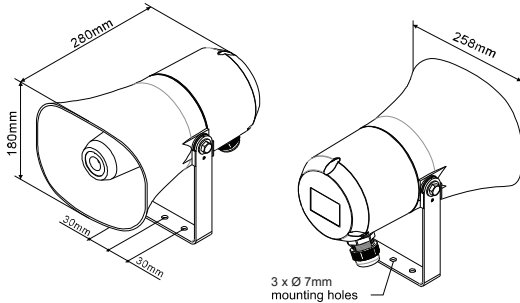


1) Remove the "U" bracket from the speaker. Align the bracket and mark the fixing points. Fix the bracket using suitable fixings (Not supplied).

2) Remove the back lid of the horn.

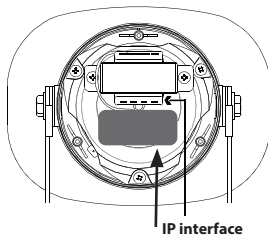


3) Connect cables to the speaker.
4) Around the inner section of the chamber where the back lid was removed a rubber gasket is located; please make sure that it is in place when re-fitting the back lid to avoid water penetration. There is a fibreglass sleeve covering the central mounting bolt, it is important that this cover is used as it protects the transformer.

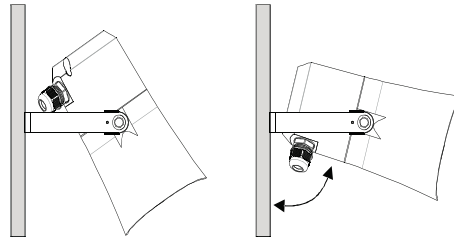


5) Re-fit the speaker to the "U" bracket. Position the speaker to the desired angle then tighten the fixings to secure in place.



SPEAKER CONNECTIONS

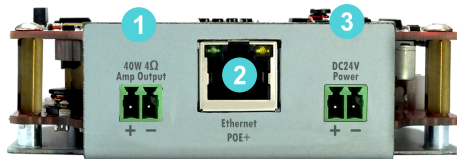

1. Speaker connection - 1 channel 20 W
2. RJ45 connector Ethernet
3. 24 VDC power input

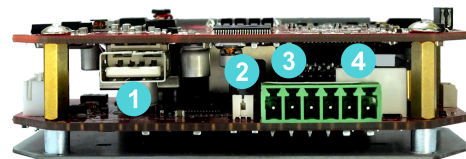


1. USB interface (function reserved - Not available)
2. Microphone input
3. 3 logic control inputs
4. 1 contact output

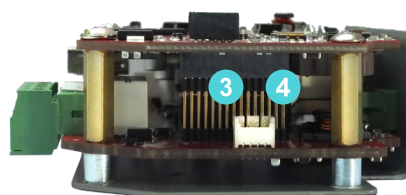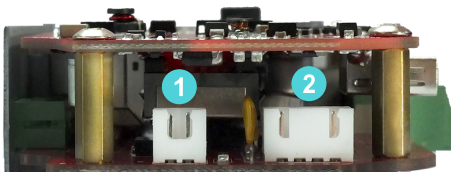

1. LED strobe light interface (function reserved - Not available)
2. RS232 interface (function reserved - Not available)
3. Power LED interface (+ -)
4. Status LED interface (+ -)

FUNCTION BLOCK

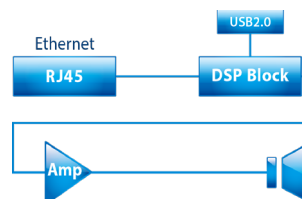

Disclaimer: We reserve the right of changes and errors.




ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global

INSTALLATION GUIDE

APH30-IP

LOUDSPEAKER CONNECTIONS

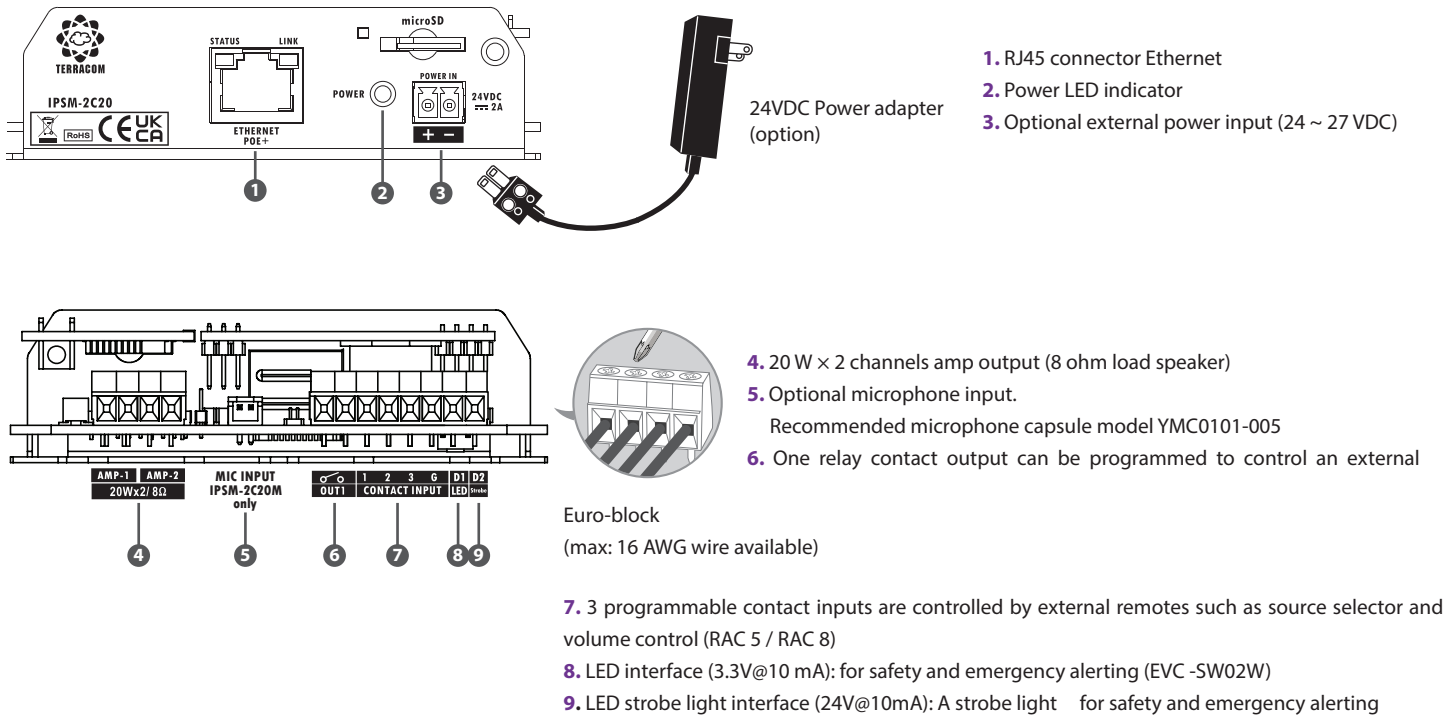

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global




QUICK START

APH30-IP


Network

APH30-IP is shipped set to the default IP Address of 192.168.100.1:

1. Specify the IPv4 of the computer manually and in the same range of the APH-30-IP (192.168.100.xxx).
2. Open a web-browser on the computer (Chrome or Firefox recommended) and navigate to the speaker's address. (192.168.100.1).
3. Default **User name / Password: admin / admin.**

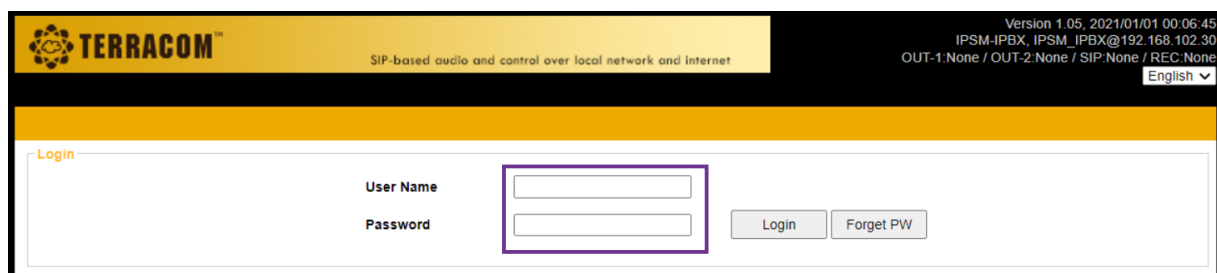

4. Click **SETUP > BASIC SETTINGS**: define a manual IP address or enable DHCP.

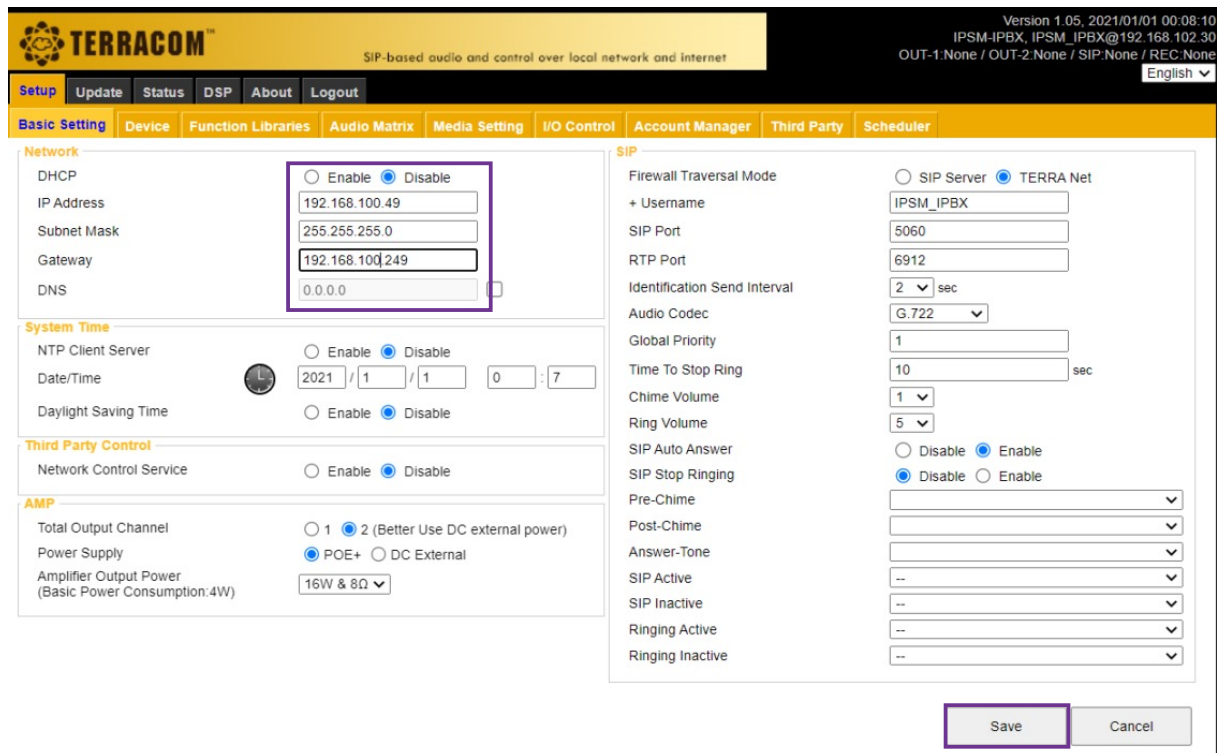

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global




QUICK START

APH30-IP

DSP

Adjust different audio features by navigating to the **DSP Tab**.

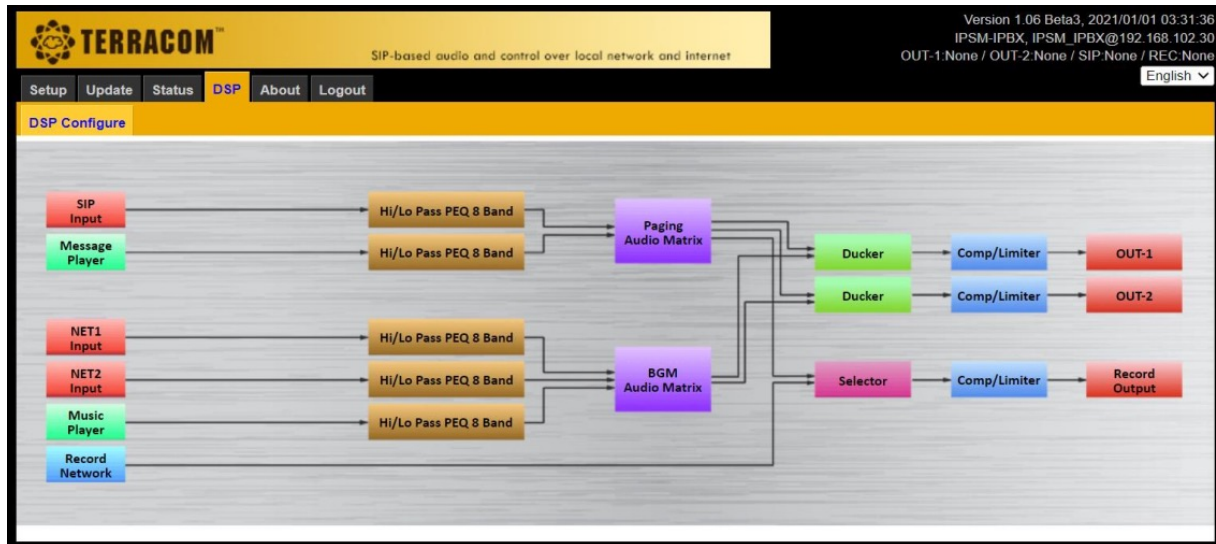

You will be able to adjust output volume by clicking on "OUT1".

This will open a popup window, allowing you to change the volume and showing the current output level on a VU meter.

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global





ONVIF APH30-IP

Milestone VMS

1. Within the **ONVIF** section of the configuration page change the **User Authorize** to **Enable**.

The screenshot shows the TERRACOM configuration interface. The top navigation bar includes tabs for Setup, Update, Status, DSP, About, and Logout. Below this is a secondary navigation bar with tabs for Basic Setting, Device, Function Libraries, Audio Matrix, Media Setting, I/O Control, Account Manager, Third Party, and Scheduler. The main content area is divided into several sections: Network, System Time, Third Party Control, AMP, SIP, and Onvif. In the Onvif section, the 'Onvif Enable' and 'User Authorize' options are both set to 'Enable'. Other settings include HTTP Port (8000), RTP/RTSP Port (554), RTP UDP Port (4076), and Audio Format (G.711 ulaw). The interface also includes a 'Save' button and a 'Cancel' button at the bottom right.

Version 1.09, 2021/01/01 00:00:57
IPSM-IPBX, IPSM_IPBX@192.168.100.1
OUT-1:None / OUT-2:None / SIP:None / REC:None
English

Setup | Update | Status | DSP | About | Logout

Basic Setting | Device | Function Libraries | Audio Matrix | Media Setting | I/O Control | Account Manager | Third Party | Scheduler

Network
DHCP: ☐ Enable ☒ Disable
IP Address: 192.168.100.1
Subnet Mask: 255.255.255.0
Gateway: 192.168.100.249
DNS: 0.0.0.0 ☐

System Time
NTP Client Server: ☐ Enable ☒ Disable
Date/Time: 2021 / 1 / 1 0 : 0
Daylight Saving Time: ☐ Enable ☒ Disable

Third Party Control
Network Control Service: ☐ Enable ☒ Disable

AMP
Total Output Channel: ☒ 1 ☐ 2 (Better Use DC external power)
Power Supply: ☒ POE+ ☐ DC External
Amplifier Output Power (Basic Power Consumption:4W): 20W & 8Ω

SIP
Firewall Traversal Mode: ☐ SIP Server ☒ TERRA Net
+ Username: IPSM_IPBX
SIP Port: 5060
RTP Port: 6912
Identification Send Interval: 2 sec
Audio Codec: G.722
Global Priority: 1
Time To Stop Ring: 10 sec
Chime Volume: 1
Ring Volume: 5
SIP Auto Answer: ☐ Disable ☒ Enable
SIP Stop Ringing: ☒ Disable ☐ Enable
Pre-Chime: --
Post-Chime: --
Answer-Tone: --
SIP Active: --
SIP Inactive: --
Ringing Active: --
Ringing Inactive: --

Onvif
Onvif Enable: ☒ Enable ☐ Disable
User Authorize: ☒ Enable ☐ Disable
HTTP Port: 8000
RTP/RTSP Port: 554
RTP UDP Port: 4076
Audio Format: G.711 ulaw

Save Cancel

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.

Celsiusstraat 1, 2652 XN Lansingerland, Netherlands


Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global




ONVIF APH30-IP



2. Within **Milestone VMS** in the **Recording Server** screen, right click and click **add hardware**, and then choose the option. Click next.

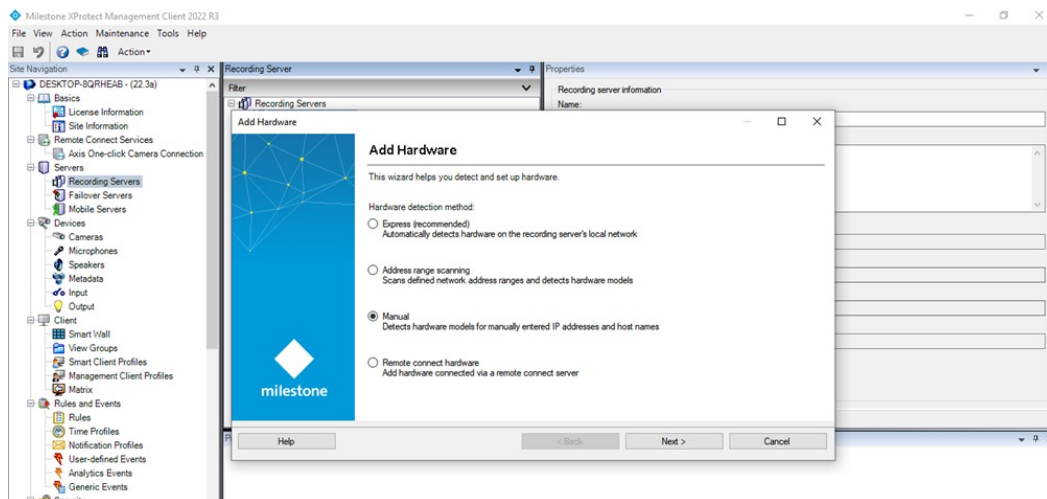

3. Add the **username** and **password** of the Penton IP speaker product to the user credentials list and **untick** the default credentials entry. Click next.

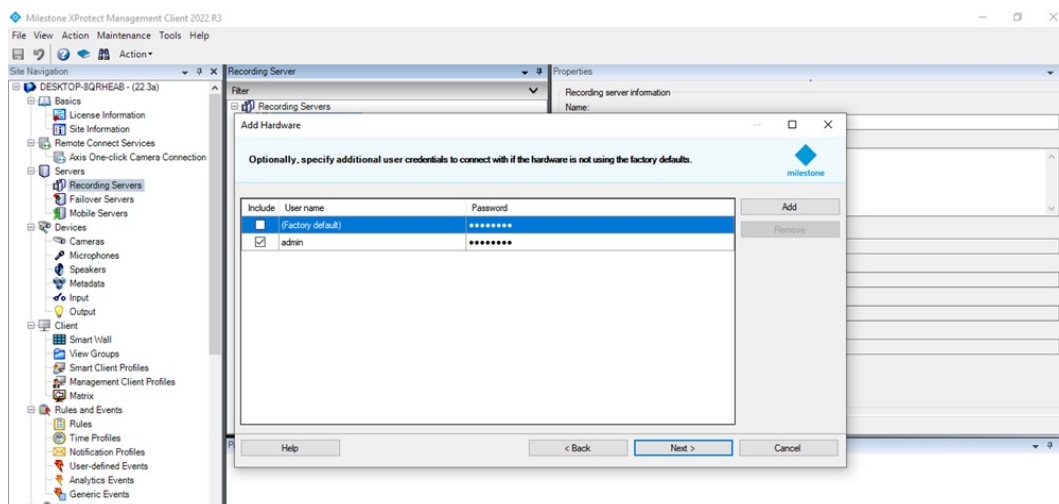

Disclaimer: We reserve the right of changes and errors.




ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global




ONVIF APH30-IP

4. Leave all the manufacturers **ticked**. Click next.

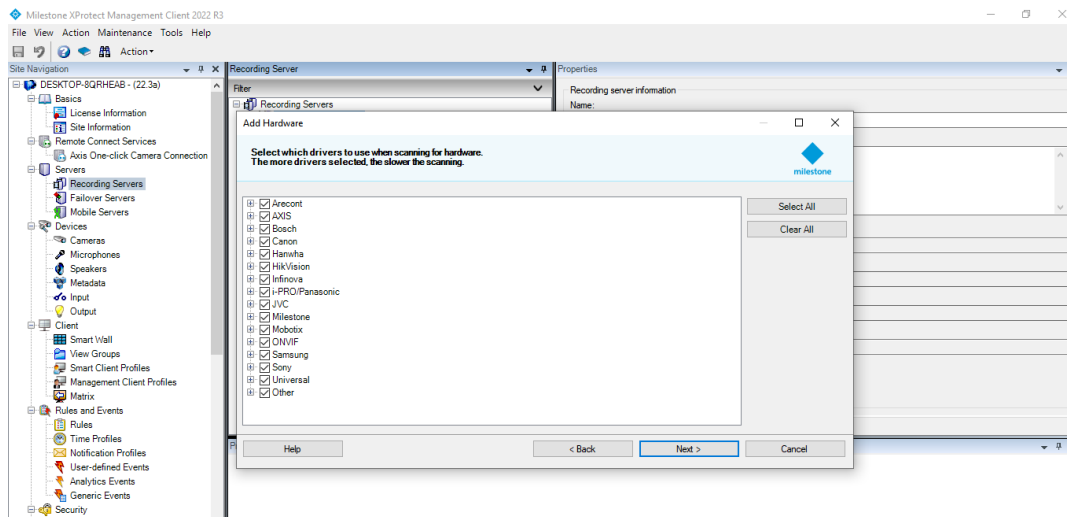

5. Enter the **IP address** of the Penton IP speaker and add the port as **8000**. Click next.

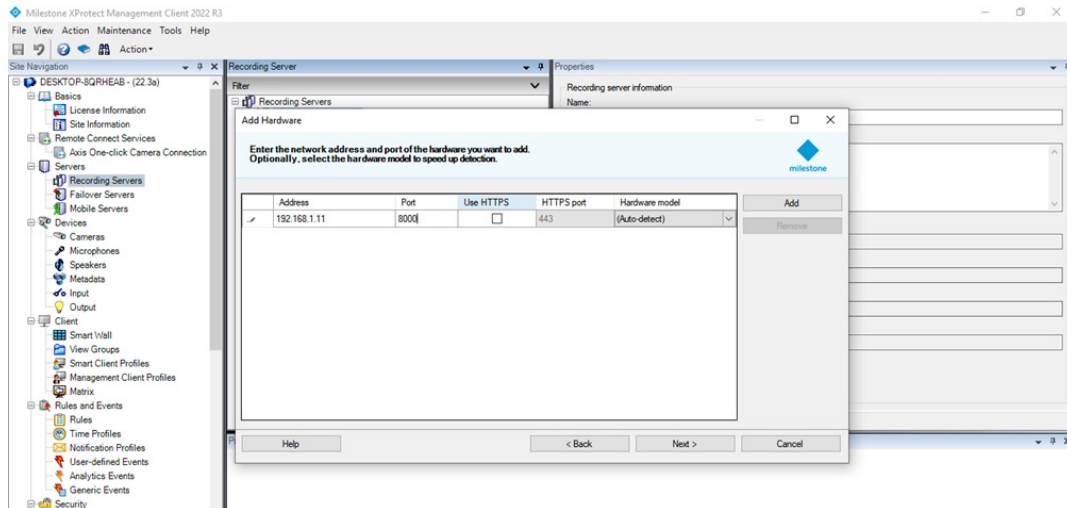

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global




ONVIF APH30-IP

7. Select the hardware elements that you would like to implement.


Camera: will show a holding screen to show connection.

Microphone: will allow the IP speaker device to stream back to the VMS. (For example, triggering messages etc.)

Loudspeaker: will allow the VMS to communicate with the IP speaker via any connected microphone.

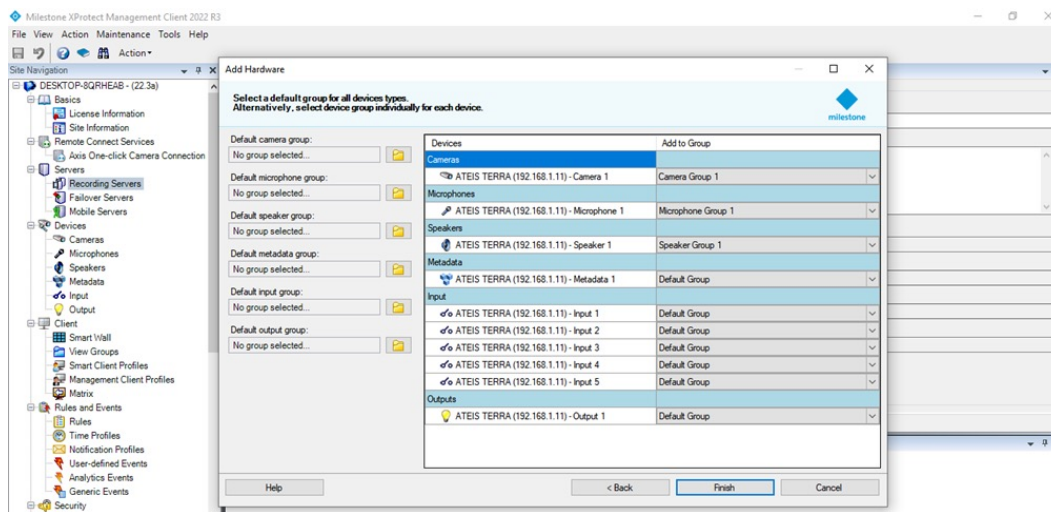

8. Add devices to the desired groups.

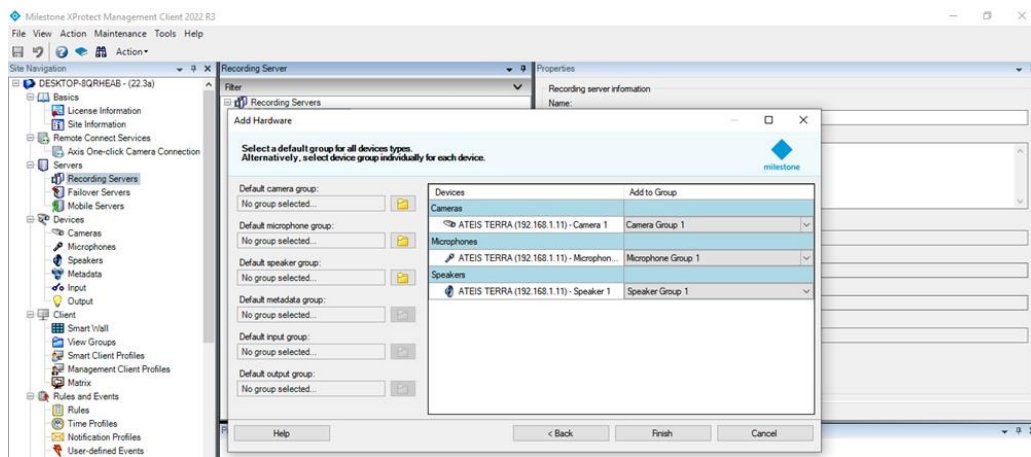

Disclaimer: We reserve the right of changes and errors.




ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global






ONVIF APH30-IP

9. All resources will now be available in the Milestone VMS.

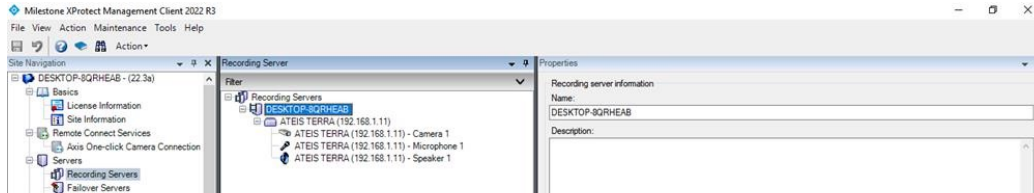

Dahua DSS

1. Within the **ONVIF** section of the configuration page change the **User Authorize** to **Enable**.

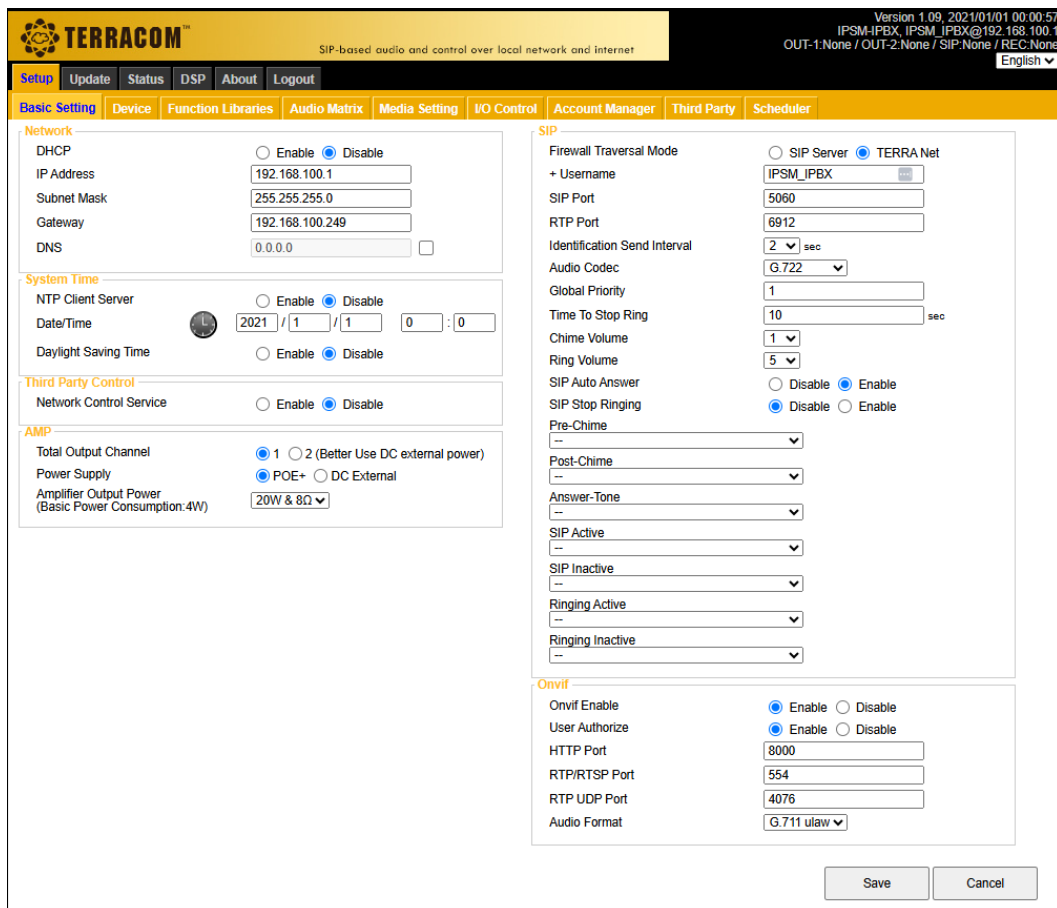


Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global

ONVIF APH30-IP


2. Within the **DSS** software go to the **Device Menu** screen and **click add**.

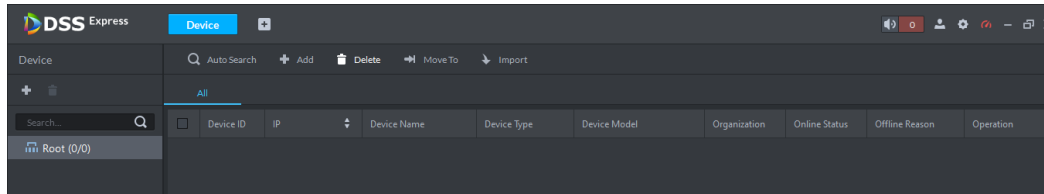


3. Enter the following information:

- 1) Enter the desired device name
- 2) Register Mode is **ONVIF**
- 3) Category is **Encoder**
- 4) Enter the IP address of the speaker/module
- 5) Port is **8000**
- 6) Enter Username/Password of the IP loudspeaker/module

Then click **Add**.

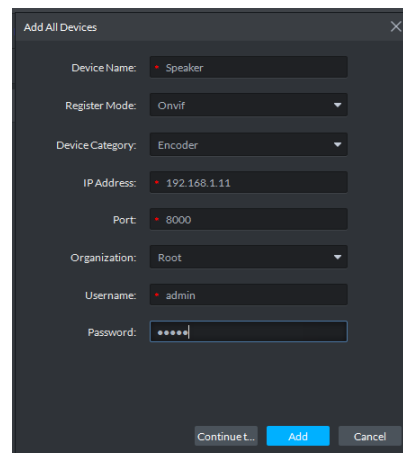


4. Wait for the device to show online.

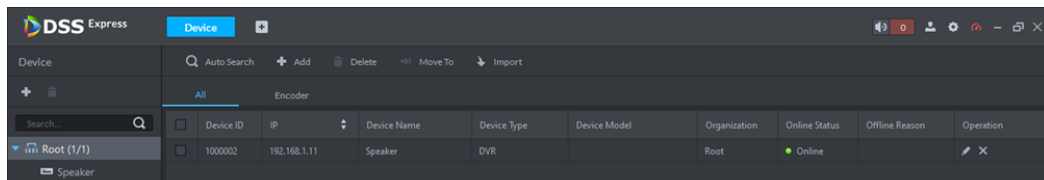

5. Return to the **Live View** screen for the device you have just added and click the small microphone icon.

Ensure all the microphone settings are correct within the DSS in relation to your input microphone.

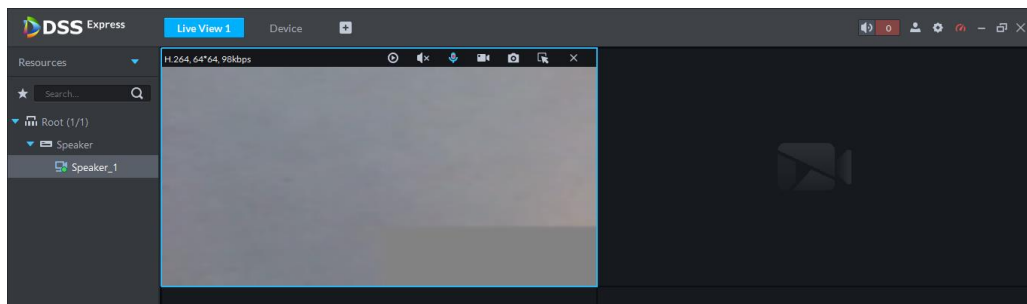

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global





SET UP TERRACOM II APH30-IP

Go further with TERRACOM II

Please download the TERRACOM II User Manual by clicking the link below:

Disclaimer: We reserve the right of changes and errors.



ATEIS Europe B.V.
Celsiusstraat 1, 2652 XN Lansingerland, Netherlands
Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global

