

WALLMOUNT SPEAKER, WOODEN HOUSING

WWC6/T

With its Softline design, the WWC6/T is a combination of modern design and more convincing power. Due to its high-quality, low-resonance wooden housing, including a rear wall fastened with screws, in combination with a ball-protected Zinkor steel sheet grid, the WWC6/T withstands even the most critical eye.

The WWC6/T is ideal for music and voice transmission. It can be mounted on solid ceilings as well as on walls.

The wall-mounted loudspeaker WWC6/T is supplied with mounting hardware.



• Electrical	
Rated power, Watts	6
Tappings 100 volt line, Watts	6/3/1.5/0.75/0.25
Transformer Impedance, Ohms 100V	1.67k/3.33k/6.66k/13.3k/39.9k
Tappings 70.7 volt line, Watts	3/1.5/0.75/0.375
Driver impedance, Ohms	8
Effective Frequency Range, Hz (BSEN60268-5)	85-18.500
S.P.L. @ 1m, 1 watt, dB, Test Signal Bandwidth 100Hz-10 kHz	95
S.P.L. @ Full power Octave Bandwidth, dB	103
Acoustic Power (dB-PWL@1 watt) 1 k/2kHz, dB	92/91
Dispersion at 1k/2k Hz, Degrees	180/180
Directivity Axial Q factor, 1k/2kHz	5.4/7.0
Environmental	
IP Rating	21
Min/Max amb temp	-10°C to 55°C
Relative Humidity	n/a
Mechanical	
Dimensions, mm	254x195x82
Net weight, kg	1.8
Colour/Finish	White, RAL 9016
Material	Wood, Sheet steel grille
Mounting	Screws



ATEÏS Europe B.V.


Celsiusstraat 1, 2652 XN Lansingerland, Netherlands Phone +31 (0)10 208 86 90, www.ateis-europe.com, info@ateis-europe.com





INSTALLATION GUIDE WWC 6/T

Front view (unit: mm)

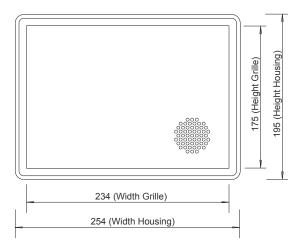


Top view (unit: mm)



- 1) Remove the housing rear wall of the WWC. Then position the back on the desired wall (guide the cable through the hole) and mark through the holes provided.
- 2) Drill the markings and attach the housing rear wall of the loudspeaker to the wall.
- 3) Select loudspeaker connection and power connection at the transformer.
- 4) Place the speaker on the housing rear wall and tighten it with the screws. Provide screws with cover caps.

WS Converse Nove Circuit Diagram

Frequency response

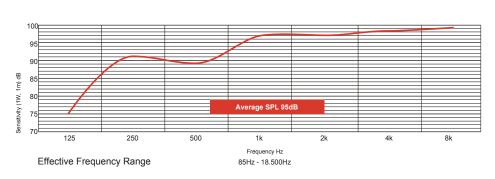

Disclaimer: We reserve the right of changes and errors.



ATEÏS Europe B.V.

Celsiusstraat 1, 2652 XN Lansingerland, Netherlands Phone +31 (0)10 208 86 90, www.ateis-europe.com, info@ateis-europe.com

