


MOULDED CABINET LOUDSPEAKER

PWC6T/ENC





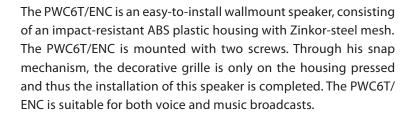

EN54-24:2008 0905-CPR-201109 TYPE A

Standard	Compliant to EN54-24 Compliant to BS5839:8		
• Electrical			
Rated power, Watts	6		
Tappings 100 volt line, Watts	6/3/1.5/0.75/0.25		
Transformer Impedance, Ohms 100V	1.67k/3.33k/6.66k/13.3k/40k		
Tappings 70.7 volt line, Watts	3/1.5/0.75/0.375/0.125		
Driver impedance, Ohms	8		
Effective Frequency Range, Hz (BSEN60268-5)	220-18.500		
S.P.L. @ 4m, 1watt, dB,1/3 Octave, 1KHz	93		
S.P.L. @ 1m, 1watt, dB, Test Signal Bandwidth 100Hz-10kHz	100		
S.P.L. @ 4m, Full power, dB, 1/3 Octave 1KHz	79		
S.P.L. @ 1m, Full power, Test Signal Bandwidth 100Hz-10kHz	83		
Dispersion at 1k/2k Hz, Degrees	167/89 Horizontal 115/104 Vertical		
Environmental			
IP Rating	21		
Min/Max amb temp	-10°C to 55°C		
Relative Humidity	≤95%		
Mechanical			
Dimensions, WxHxD mm	233 x 168 x 75		
Net weight, kg	1.05		
Colour (Unless Specified)	White, RAL9016		
Material	Low smoke zero Halogen UL-94V0 Plastic with UV inhibitors		
Mounting	2x Screws		
Safety	Ceramic Block Thermal Fuse Capacitor for DC line monitoring		



ATEÏS Europe B.V.


Celsiusstraat 1, 2652 XN Lansingerland, Netherlands Phone +31 (0)10 208 86 90, www.ateis-europe.com, info@ateis-europe.com





INSTALLATION GUIDE PWC6T/ENC


EN54-24:2008 0905-CPR-201109 **TYPE A**

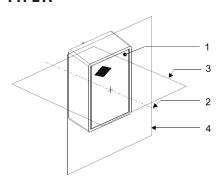

- 1. Loudspeaker enclosure
- 2. Reference axis
- 3. Reference plane
- 4. Horizontal plane

With Transformer: 100V/70V line

	White wire plus tapping					
100V	0.25W	0.75W	1.5W	3W	6W	СОМ
70V	0.125W	0.375W	0.75W	1.5W	3W	COM
IMP (Ω)	39.9k	13.3k	6.66k	3.33k	1.67k	

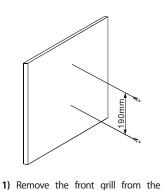


speaker by using a flat blade or screw


driver placed between the grill and case.


Gently lever the grill upwards taking


care not to damage the grill or plastic

cabinet.

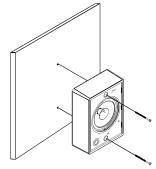

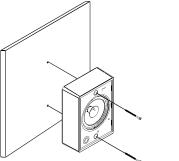

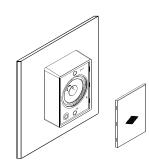


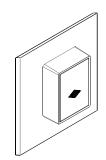


2) Once the grill has been removed place the speaker on a flat surface in your chosen position. Mark the fixing points on the wall. Prepare the wall to take the fixings. If 20mm cable glands are to be used then the speaker cabinet can be drilled using a suitable drill bit. Make sure you place the cable entry in a location that will not prevent the cable from being blocked or restricted by any internal components.


3) Connect the speaker cable into the 3 way terminal block located on the cabinet. Select your required tapping. Fix the speaker cabinet to the wall using suitable fixings (not provided).

4) Fit the front grill by aligning it with the cabinet and simply push it into place.

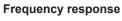

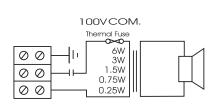

Circuit Diagram

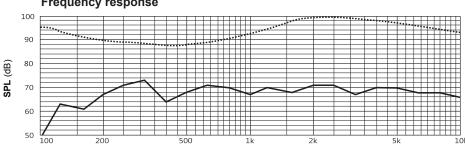

----- Sensitivity 100Hz-10000Hz Oct. Pink noise 1W/1 Meter) Sensitivity 100Hz-10000Hz 1/3 Oct. Pink noise 1W/4 Meters)

*Active Equalizer Applied: YES (EQ Setting: +3.5dB@630Hz,+3.5dB@800Hz,-3.5dB@1250Hz,-3.5dB@1600Hz,-2.5dB@4KHz)

Disclaimer: We reserve the right of changes and errors.



ATEÏS Europe B.V.

Celsiusstraat 1, 2652 XN Lansingerland, Netherlands Phone +31 (0)10 208 86 90, www.ateis-europe.com, info@ateis-europe.com

Frequency (Hz)

