

ROUND METAL 2-WAY CEILING LOUDSPEAKER

RCS8/TCOAX 20W

The RCS range of Co-Axial ceiling loudspeakers have been carefully designed to blend seamlessly into any installation. These units are stylish yet unobtrusive.

Made from a pressed steel epoxy coated chassis incorporating a two-way speaker system comprising a bass mid-range driver and separate tweeter. The bass response has been extended to give depth and warmth to both music and vocals. Both drive units have been carefully tailored to give an exceptionally smooth performance.

Designed to make installation quick and easy, suitable for use in applications where high quality background music and speech are the primary requirement such as shops, schools, restaurants, hotels, public houses, offices etc.



| • Electrical | |
|---|-----------------------------------|
| Maximum power, Watts | 30 |
| Rated power, Watts | 20 |
| Tappings 100 volt line, Watts | 20/10/5/2.5 |
| Transformer Impedance, Ohms 100V | 0.5k/1k/2k/4k |
| Tappings 70.7 volt line, Watts | 10/5/2.5/1.25 |
| Driver impedance, Ohms | 8 |
| Effective Frequency Range, Hz (BSEN60268-5) | 60 - 20,000 |
| S.P.L. @ 1m, 1 watt, dB, Test Signal Bandwidth 100Hz-10 kHz | 91 |
| S.P.L. @ Full power Octave Bandwidth, dB | 104 |
| Acoustic Power (dB-PWL@1 watt) 1 k/2kHz, dB | 87/89 |
| Dispersion at 1k/2k Hz, Degrees | 180/100 |
| Directivity Axial Q factor, 1k/2kHz | 3.0 /6.5 |
| Environmental | |
| IP Rating | 21 |
| Min/Max amb temp | -10°C to 55°C |
| Relative Humidity | n/a |
| Mechanical | |
| Dimensions, mm | Ø280x110 |
| Net weight, kg | 1.85 |
| Colour/Finish | White RAL9016 |
| Material | Steel |
| Mounting | Torsion springs, Mounting bracket |



ATEÏS Europe B.V.


Celsiusstraat 1, 2652 XN Lansingerland, Netherlands Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global






INSTALLATION GUIDE RCS8/TCOAX 20W


Side view (unit: mm)

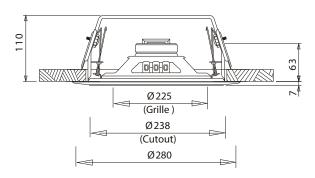

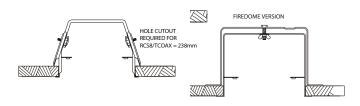

1) Place the mounting bracket inside the ceiling aperture and secure it with the two black knobs.


2) Loosen the retaining sliders and push to the top of the bracket. Once the bracket is through the hole pull down the sliders and tighten the retaining nut clamping the ceiling.

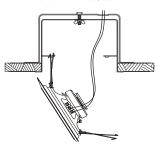

3) FITTING THE SPEAKER
Compress "V" spring and fit into the retaining ear within the bracket.
Connect cable to terminal block and select wattage required.



4) Fit second "V" clip into second retaining ears and gently push the speaker up into the bracket (do not push the central perforated grille area) the speaker will self locate into the bracket.

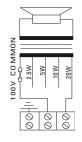

Circuit Diagram

Frequency response 100 95 96 97 98 88 88 88 88 88 125 250 500 1k 2k 4k 8k Frequency Hz 60Hz - 20KHz

Disclaimer: We reserve the right of changes and errors.



ATEÏS Europe B.V.

Celsiusstraat 1, 2652 XN Lansingerland, Netherlands Phone +31 (0)10 208 86 90, www.ateis-europe.com, info.eu@ateis.global

