

## MDF WOODEN CABINET LOUDSPEAKER SOFTLINE-DESIGN

### WWC6/TRV

With its Softline design, the WWC6/TRV is a combination of modern design and more convincing power. It has Voice-Control, OFF-Function, Override Relay on board. Due to its high-quality, low-resonance wooden housing, including a rear wall fastened with screws, in combination with a ball-protected Zinkor steel sheet grid, the WWC6/TRV withstands even the most critical eye. The WWC6/TRV is ideal for music and voice transmission. It can be mounted on solid ceilings as well as on walls.

The wall-mounted loudspeaker WWC6/TRV is supplied with mounting hardware.



• Floatrical	
• Electrical	
Rated power, Watts	10
Tappings 100 Volt line, Watts	6/3/1.5/OFF
Transformer Impedance, Ohms 100V	1.67k/3.33k/6.66k
Tappings 70.7 Volt line, Watts	833/1.67k/3.33k
Driver impedance, Ohms	8
Effective Frequency Range, Hz (BSEN60268-5)	85-18.500
S.P.L. @ 1 m, 1 Watt, dB, Octave, 100 Hz-10 kHz	90
S.P.L. @ 1 m, Full power, dB, Octave, 100 Hz-10 kHz	97
Dispersion at 1k Hz, Degrees	180
Directivity Axial Q factor, 1k Hz	2.3
Priority Relay	24 VDC 18.75 mA ±10% (at 23±5°C)
Environmental	
IP Rating	21
Min/Max amb temp	-10°C to 55°C
Relative Humidity	n/a
Mechanical	
Dimensions, mm	254 x 195 x 82
Net weight, kg	1.84
Colour/Finish	White, RAL9016
Material	Wood, Sheet steel grille
Mounting	Clamp with screw (x2)



ATEÏS Europe B.V.


Celsiusstraat 1, 2652 XN Lansingerland, Netherlands Phone +31 (0)10 208 86 90, www.ateis-europe.com, info@ateis-europe.com






# INSTALLATION GUIDE WWC6/TRV


Front view (unit: mm)

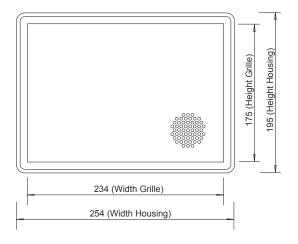


Rear view (unit: mm)

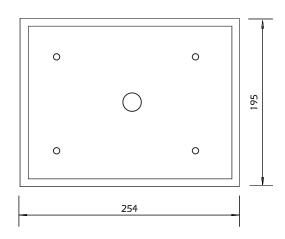


Side view (unit: mm)

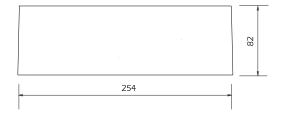

- 1) Remove the housing rear wall of the WWC. Then position the back on the desired wall (guide the cable through the hole) and mark through the holes provided.
- 2) Drill the markings and attach the housing rear wall of the loudspeaker to the wall.
- 3) Select loudspeaker connection and power connection at the transformer.
- **4)** Place the speaker on the housing rear wall and tighten it with the screws. Provide screws with cover caps.

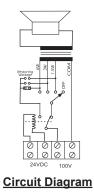

#### Frequency response

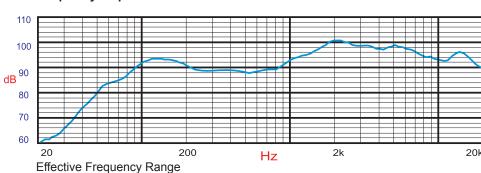

Disclaimer: We reserve the right of changes and errors.



### ATEÏS Europe B.V.

Celsiusstraat 1, 2652 XN Lansingerland, Netherlands Phone +31 (0)10 208 86 90, www.ateis-europe.com, info@ateis-europe.com

